



3

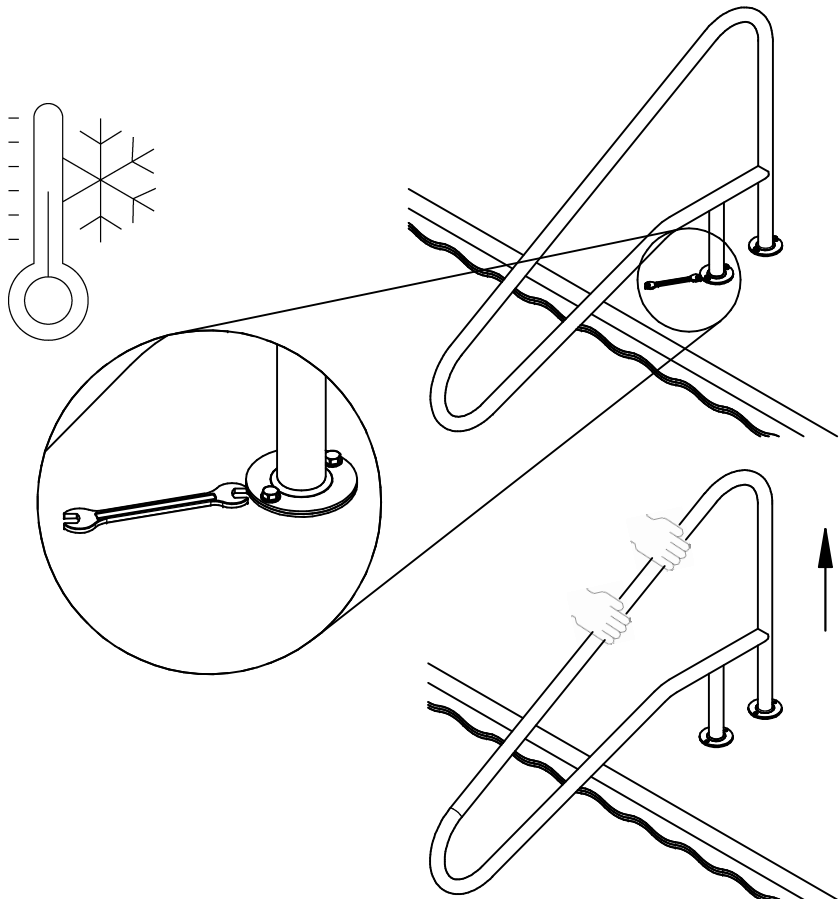

4

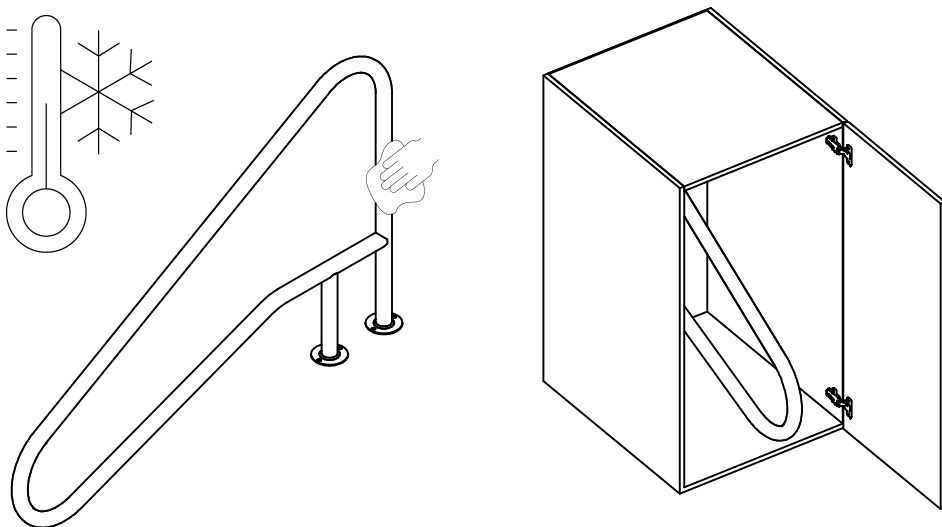

09940675









INSTRUCCIONES DE MONTAJE
BARANDILLA FX - 02 / PLETINA SOLDADA


ASSEMBLY INSTRUCTIONS
HANDRAILS FX - 02 / WELDED FLANGE

INSTRUCTIONS DE MONTAGE
SORTIES DE BAIN FX - 02 / PLETINE SOUDÉE

MONTAGEANLEITUNGEN
HALTEGRIFFE FX - 02 / GESCHWEIßTE FLANSCH

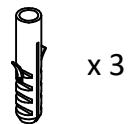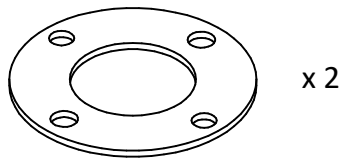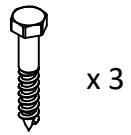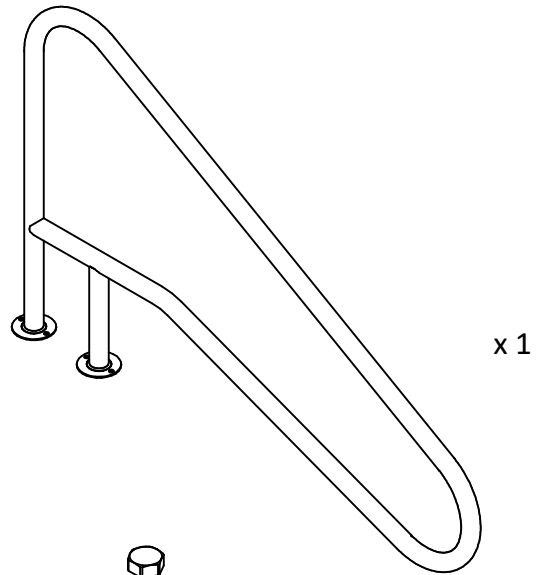

1

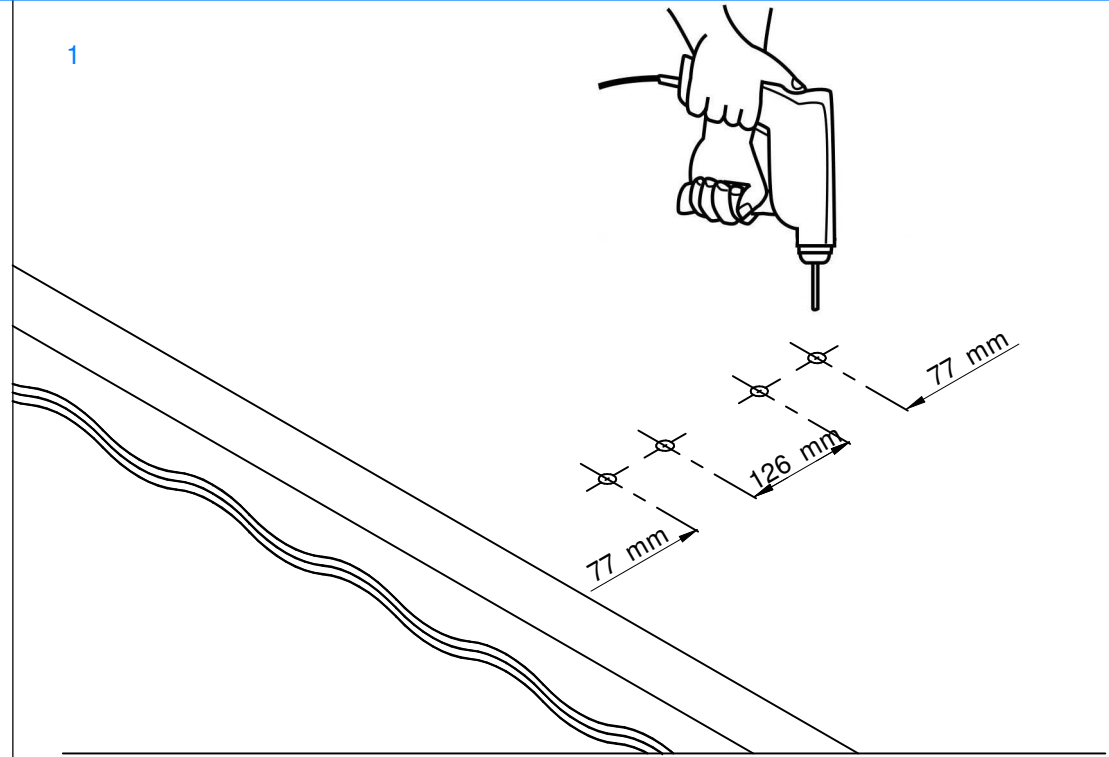

2

